

Table of Contents

Preface	xiii
Dedication	xv

Chapter 1: Introduction to AutoCAD LT

Starting AutoCAD LT	1-2
AutoCAD LT Screen Components	1-2
Drawing Area	1-2
Command Window	1-3
Status Bar*	1-4
Status Bar Tray Options	1-6
Invoking Commands in AutoCAD LT	1-7
AutoCAD LT Dialog Boxes	1-11
Starting a New Drawing	1-13
Open a Drawing	1-14
Start from Scratch	1-14
Use a Template	1-15
Use a Wizard	1-16
Saving Your Work	1-22
Save Drawing As Dialog Box	1-22
Automatic Timed Save	1-26
Creation of Backup Files	1-26
Changing Automatic Timed Saved and Backup Files Into AutoCAD LT Format	1-26
Using the Drawing Recovery Manager to Recover Files	1-26
Closing a Drawing	1-27
Opening an Existing Drawing	1-28
Opening an Existing Drawing Using the Select File Dialog Box	1-28
Opening an Existing Drawing Using the Startup Dialog Box	1-30
Opening an Existing Drawing using the Drag and Drop Method	1-30
Exiting AutoCAD LT	1-31
Dynamic Input Mode	1-31
Enable Pointer Input	1-31
Enable Dimensional Input where possible	1-32
Show command prompting and command input near the crosshairs	1-34
Drafting Tooltip Appearance	1-34
Creating and Managing Workspaces	1-35
Creating a New Workspace	1-35
Modifying the Workspace Settings	1-36
The AutoCAD LT Help	1-37
Additional Help Resources	1-40

Chapter 2: Getting Started with AutoCAD LT

Drawing Lines in AutoCAD LT	2-2
Coordinate Systems	2-6
Absolute Coordinate System	2-6
Relative Coordinate System	2-9
Direct Distance Entry	2-14
Erasing Objects	2-16
Canceling and Undoing a Command	2-17
Object Selection Methods	2-17
Drawing Circles	2-20
Basic Display Commands	2-25
Setting Units	2-27
Setting Limits of the Drawing	2-34
Introduction to Plotting Drawings	2-38
Modifying AutoCAD LT Settings Using the Options Dialog box	2-43

Chapter 3: Starting With the Advanced Sketching

Drawing Arcs	3-2
Drawing Rectangles	3-13
Drawing Ellipses	3-18
Drawing Elliptical Arcs	3-21
Drawing Regular Polygons	3-25
Drawing Polylines	3-27
Drawing Donuts	3-33
Drawing Points	3-35
Drawing Infinite Lines	3-38
Drawing XLINE	3-39
Drawing RAY	3-41
Writing a Single Line Text	3-42

Chapter 4: Working with Drawing Aids

Understanding the Concept and Use of Layers	4-2
Working with Layers	4-3
LINETYPE Command	4-17
LWEIGHT Command	4-17
Object Properties	4-19
Properties Toolbar	4-19
PROPERTIES Palette	4-20
Global and Current Linetype Scaling	4-22
LTSCALE Factor for Plotting	4-22
Working with the DESIGNCENTER	4-24

Drafting Settings Dialog Box*	4-25
Drawing Straight Lines Using the Ortho Mode	4-29
Working with Object Snaps	4-30
Running Object Snap Mode	4-44
Using AutoTracking	4-48
Function and Control Keys	4-51

Chapter 5: Editing Sketched Objects-I

Creating a Selection Set	5-2
Editing Sketches	5-8
Moving Sketched Objects	5-8
Copying Sketched Objects	5-9
Copying Objects Using the Base Point	5-10
Pasting Contents from the Clipboard	5-11
Pasting Contents Using the Original Coordinates	5-11
Offsetting Sketched Objects	5-12
Rotating Sketched Objects	5-14
Scaling Sketched Objects	5-16
Filleting Sketches	5-18
Chamfering Sketches	5-21
Trimming Sketched Objects	5-25
Extending Sketched Objects	5-28
Stretching Sketched Objects	5-30
Lengthening Sketched Objects	5-32
Arraying Sketched Objects	5-34
Rectangular Array	5-34
Polar Array	5-36
Mirroring Sketched Objects	5-40
Breaking Sketched Objects	5-42
Measuring Sketched Objects	5-44
Dividing Sketched Objects	5-45
Joining Sketches Objects	5-46

Chapter 6: Editing Sketched Objects-II

Editing With Grips	6-2
Types of Grips	6-2
Adjusting Grip Settings	6-3
Editing Objects with Grips	6-5
Stretching Objects with Grips (Stretch Mode)	6-5
Moving Objects with Grips (Move Mode)	6-8
Rotating Objects with Grips (Rotate Mode)	6-8
Scaling Objects with Grips (Scale Mode)	6-10
Mirroring Objects with Grips (Mirror Mode)	6-12

Loading Hyperlinks	6-13
Editing Gripped Objects	6-13
Changing Properties Using PROPERTIES Palette	6-14
Changing Properties using Grips	6-14
Matching Properties of Sketched Objects	6-15
Quick Selection of Sketched Objects	6-16
Managing Contents Using the DESIGNCENTER	6-18
Making Inquiries About Objects and Drawings	6-24
Measuring the Area of the Objects	6-25
Measuring the Distance between Two Points	6-28
Identifying the Location of a Point on the Screen	6-29
Listing Information about Objects	6-30
Checking Time-Related Information	6-31
Displaying Drawing Properties	6-31

Chapter 7: Controlling the Drawing Display and Creating Text

Basic Display Options	7-2
Redrawing the Screen	7-2
Regenerating The Drawing	7-2
Zooming Drawings	7-3
Panning Drawings	7-11
Creating Views	7-13
Aerial View	7-16
Creating Text	7-17
Writing Single Line Text	7-18
Entering Special Characters	7-23
Creating Multiline Text	7-24
Editing Text	7-37
Editing Text Using the DDEDIT Command	7-38
Editing Text Using the PROPERTIES Palette	7-38
Modifying the Scale of the Text	7-39
Modifying the Justification of the Text	7-39
Inserting Table in the Drawing	7-40
Creating a New Table Style	7-42
Setting a Table Style Current	7-47
Modifying a Table Style	7-48
Modifying Tables	7-48
Substituting Fonts	7-53
Creating Text Styles	7-54
Determining Text Height	7-56
Checking Spelling	7-57
Text Quality and Text Fill	7-58
Finding and Replacing Text	7-58

Chapter 8: Basic Dimensioning, Geometric Dimensioning, and Tolerancing

Need for Dimensioning	8-2
Dimensioning in AutoCAD LT	8-2
Fundamental Dimensioning Terms	8-3
Associative Dimensions	8-6
Definition Points	8-7
Selecting Dimensioning Commands	8-8
Creating Linear Dimensions	8-10
Creating Aligned Dimensions	8-14
Creating Arc Length Dimensions*	8-16
Creating Rotated Dimensions	8-17
Creating Baseline Dimensions	8-17
Creating Continued Dimensions	8-19
Creating Angular Dimensions	8-20
Creating Diameter Dimensions	8-24
Creating Jogged Dimensions	8-25
Creating Radius Dimensions	8-25
Generating Center Marks and Centerlines	8-26
Creating Ordinate Dimensions	8-27
Working With True Associative Dimensions	8-29
Removing the Dimension Associativity	8-30
Converting a Dimension into a True Associative Dimension	8-30
Drawing Leaders	8-30
Using Leader with the DIM Command	8-35
Geometric Dimensioning and Tolerancing	8-35
Geometric Characteristics and Symbols	8-36
Adding Geometric Tolerance	8-37
Complex Feature Control Frames	8-40
Combining Geometric Characteristics	8-40
Composite Position Tolerancing	8-41
Using Feature Control Frames with Leaders	8-42
Projected Tolerance Zone	8-43

Chapter 9: Editing Dimensions

Editing Dimensions Using Editing Tools	9-2
Editing Dimensions by Stretching	9-2
Editing Dimensions by Trimming and Extending	9-3
Flipping Dimension Arrow	9-5
Modifying the Dimensions	9-5
Editing Dimension Text	9-6
Updating Dimensions	9-8
Editing Dimensions with Grips	9-8

Editing Dimensions Using the PROPERTIES Palette	9-8
PROPERTIES Palette (Dimension)	9-9
PROPERTIES Palette (Leader)	9-10
Model Space and Paper Space Dimensioning	9-12

Chapter 10: Dimension Styles and Dimensioning System Variables

Using Styles and Variables to Control Dimensions	10-2
Creating and Restoring Dimension Styles	10-2
New Dimension Style Dialog Box	10-3
Controlling Dimension Text Format	10-11
Fitting Dimension Text and Arrowheads	10-15
Formatting Primary Dimension Units	10-18
Formatting Alternate Dimension Units	10-22
Formatting the Tolerances	10-25
Other Dimensioning Variables	10-28
Dimension Style Families	10-29
Using Dimension Style Overrides	10-32
Comparing and Listing Dimension Styles	10-33
Using Externally Referenced Dimension Styles	10-34

Chapter 11: Model Space Viewports, Paper Space Viewports, and Layouts

Model Space and Paper Space/Layouts	11-2
Model Space Viewports (Tiled Viewports)	11-2
Creating Tiled Viewports	11-2
Making a Viewport Current	11-5
Joining Two Adjacent Viewports	11-6
Paper Space Viewports (Floating Viewports)	11-7
Creating Floating Viewports	11-7
Temporary Model Space	11-9
Editing Viewports	11-10
Controlling the Display of the Objects in Viewports	11-10
Locking the Display in Viewports	11-10
Controlling the Display of Hidden Lines in Viewports	11-11
Manipulating the Visibility of Viewport Layers	11-11
Controlling Layers in the Viewports using the Layer Properties Manager Dialog box	11-13
Paper Space Linetype Scaling (PSLTSCALE System Variable)	11-14
Inserting Layouts	11-15
Inserting a Layout Using the Wizard	11-18
Defining Page Settings	11-18
Convert Distance Between Model Space and Paper Space	11-20

Chapter 12: Plotting Drawings

Plotting Drawings in AutoCAD LT	12-2
Plotting Drawings Using the Plot Dialog box	12-2
Adding Plotters	12-11
The PLOTTERMANAGER Command	12-11
Editing Plotter Configuration	12-13
Importing PCP/PC2 Configuration Files	12-15
Setting the Plot Parameters	12-15
Working with Page Setups	12-15
Using Plot Styles	12-18
Adding a Plot Style	12-19
Plot Style Table Editor	12-21
Applying Plot Styles	12-25
Setting the Current Plot Style	12-27

Chapter 13: Hatching Drawings

Hatching	13-2
Hatching Drawings Using the Hatch Dialog box	13-3
Hatch Dialog box Options	13-5
Ray Casting	13-19
Hatching the Drawing Using the TOOL PALETTES	13-23
Hatching Around Text, Dimensions, and Attributes	13-26
Editing Hatch Patterns	13-26
Ignoring Hatch Pattern Entities While Snapping	13-28
Editing Hatch Boundary	13-30
Using Grips	13-30
Trimming the Hatch Patterns	13-31
Using AutoCAD LT Editing Commands	13-31
Hatching Blocks and Xref Drawings	13-32
Pattern Alignment During Hatching	13-32
Creating a Boundary Using Closed Loops	13-34
Other Features of Hatching	13-36

Chapter 14: Working with Blocks

The Concept of Blocks	14-2
Formation of Blocks	14-3
Converting Entities into a Block	14-5
Inserting Blocks Using the Insert Dialog Box	14-8
Block Editor*	14-15
Dynamic Blocks*	14-16
Adding Parameters and Assigning Actions to Dynamic Blocks*	14-18
Adding Parameter And Action Simultaneously Using Parameter Sets*	14-33
Insert Blocks Using the DESIGNCENTER	14-33

Using TOOL PALETTES to Insert Blocks	14-34
Adding Blocks in the TOOL PALETTES	14-37
Modifying Existing Blocks in the TOOL PALETTES	14-38
Layers, Colors, Linetypes and Lineweights for Blocks	14-39
Nesting of Blocks	14-40
Creating Drawing Files Using the Write Block Dialog Box	14-42
Defining the Insertion Base Point	14-45
Exploding Blocks Using the XPLODE Command	14-46
Renaming Blocks	14-47
Deleting Unused Blocks	14-48

Chapter 15: Defining Block Attributes

Understanding Attributes	15-2
Defining Attributes	15-2
Editing Attribute Definition	15-8
Inserting Blocks with Attributes	15-9
The ATTEXT Command for Attribute Extraction	15-12
Controlling Attribute Visibility	15-17
Editing Block Attributes	15-18
Editing Attributes Using the Edit Attributes Dialog box	15-18
Global Editing of Attributes	15-20
Inserting Text Files in the Drawing	15-27

Student Projects

1

Index

1



The following chapters are available on the author's and publisher's Web site for free download.
To download the free chapters, logon to

www.cadcim.com or
<http://technology.calumet.purdue.edu/met/tickoo/students/students.htm>

Chapter 16: Understanding External References *Chapter For Free Download*

External References	16-2
Dependent Symbols	16-2
Managing External References in a Drawing*	16-4
The Overlay Option	16-13

Working With the XATTACH Command	16-17
Adding Xref Dependent Named Objects	16-19
Demand Loading	16-21

Chapter 17: Working with Advanced Drawing Options

Chapter For Free Download

Creating Double Lines	17-2
Creating Revision Clouds	17-6
Creating Wipeouts	17-7
Creating NURBS	17-8
Editing Splines	17-9

Chapter 18: Grouping and Advanced Editing of Sketched Objects

Chapter For Free Download

Working With the Group Manager	18-2
Selecting Groups	18-4
Cycling Through Groups	18-5
Changing Properties of an Object	18-6
Using the PROPERTIES Palette	18-6
Using the CHANGE Command	18-11
Using the CHPROP Command	18-14
Exploding Compound Objects	18-15
Editing Polylines	18-16
Editing a Single Polyline	18-16
Editing Multiple Polylines	18-29
Undoing Previous Commands	18-31
Reversing the Undo Operation	18-36
Renaming Named Objects	18-37
Removing Unused Named Objects	18-38
Setting Selection Modes Using the Options Dialog box	18-40

Evaluation Copy. Do not reproduce. For information visit www.cadclm.com